




Safeguard Systems

THE DAMPER SPECIALIST COMPANY



ALWAYS READ THIS DOCUMENT BEFORE INSTALLATION. PLEASE RETAIN FOR FUTURE REFERENCE.

This product forms part of a life safety system. Failure to correctly store, handle, install and maintain the product will directly put at risk the lives of the occupants and the fabric of the building.

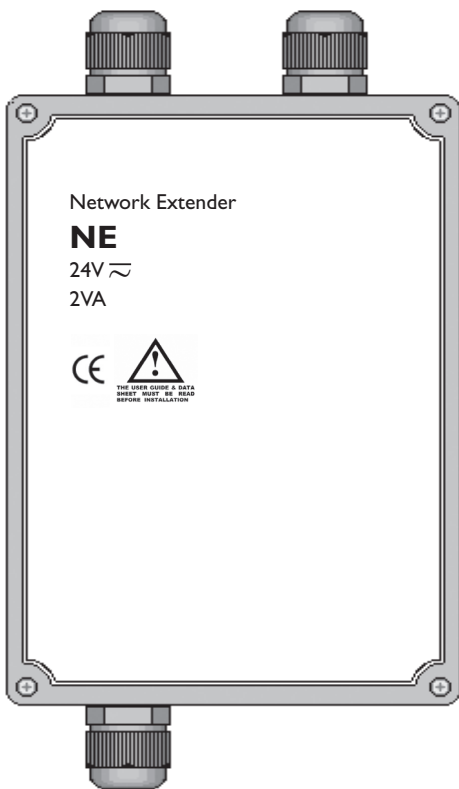

The Safeguard Network Extender is used to manage network traffic, increase the total number of devices or increase the amount of cabling in a system.

The Safeguard Network Extender is terminated for ease of installation.



ELECTROSTATIC SENSITIVE DEVICE

Installation Instructions and Datasheet

Network Extender (24V)



Safeguard Systems

THE DAMPER SPECIALIST COMPANY



Dimensions and Mounting

The compact and robust design of the NE enclosure allows the unit to be mounted to a duct, block wall or stud wall.

Ensure the NE is accessible for future maintenance purposes.

Please note: Do not drill the enclosure as this will affect its IP rating.

Mounting Diagram

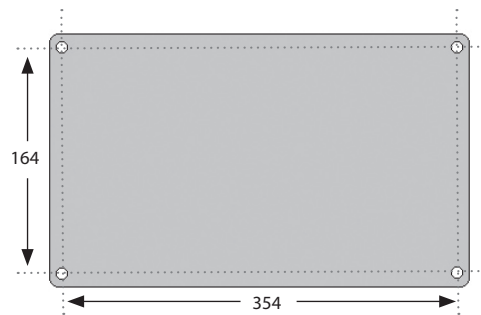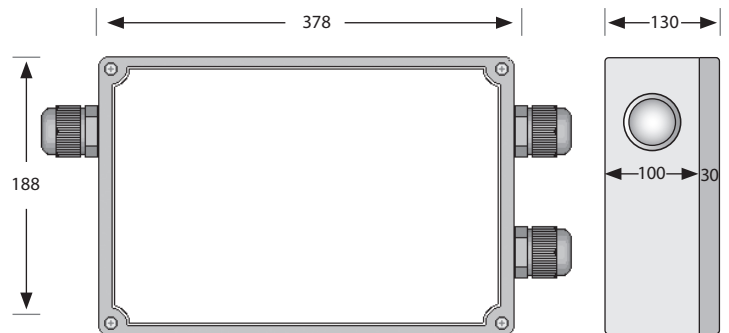

Four mounting holes
Ø 6mm for mounting
with suitable screws
depending on whether
mounting to a duct,
block wall or stud wall.

Dimensions in mm.



Safeguard Systems

THE DAMPER SPECIALIST COMPANY


Preparation

- Only trained and qualified personnel should be allowed to install, replace or service this equipment. Installation should be in accordance with the relevant local safety standards.
- The connectors can accommodate cable diameters up to 2.5mm². It is recommended that all wires be crimped to ease installation and replacement of the product.

Installation

1. Disconnect the local supply before commencing any work on the NE.
2. Wire the NE in accordance with the wiring diagram shown across.
3. It is recommended that the network cables are not run alongside any high voltage or high frequency sources. Also, network cables must not be mixed on an individual network as they have very different electrical characteristics and could render the system unreliable.
4. Once wiring is complete, apply power to the NE. The green power LED should illuminate to indicate the presence of power.
5. The NE is now ready to be configured using a standard LonWorks tool such as LonMaker or the Safeguard system.

Wiring Diagram (NE in enclosure without lid fitted)

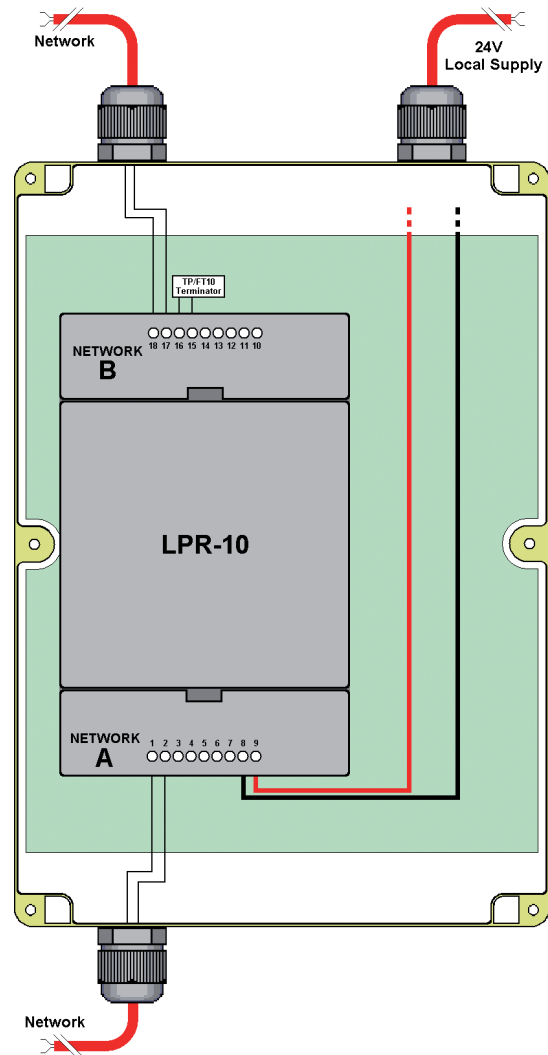



Safeguard Systems

THE DAMPER SPECIALIST COMPANY

Specification

LonWorks

Near channel transceiver type	TP/FT-10
Far channel transceiver type	TP/FT-10 (terminated)
Service functions	Service pin, service LED and neuron ID self-adhesive tag

Supply

Input voltage	(23 ± 7) V AC, 50 Hz (23 ± 7) V DC
Maximum power consumption	2 VA

Environmental

Operating temperature	-5 °C to 50 °C
Storage temperature	-20 °C to 50 °C
Humidity	80 % RH to 31 °C decreasing linearly to 50 % RH at 40 °C
Maximum altitude	2000 m

Conformance

EMC	EN 55011: 1999 + A2: 2002 EN 61000-6-1: 2001
-----	---

Enclosure

Material	Polycarbonate
IP rating	IP 54
Flammability	UL 94V-0
Pollution	Category 2
Dimensions (excl glands)	278 mm x 188 mm x 130 mm (L x W x D)
Dimensions (incl glands)	328 mm x 188 mm x 130 mm (L x W x D)

 Complies with European standards

WARNING: The responsible body shall be made aware that, if the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

© 1996 - 2007 Safeguard Systems Limited. The information herein is subject to change without notice. We do not assume any liability arising out of the use of this product. Purchase of goods and services is subject to Safeguard Systems standard terms and conditions. Product warranty 12 months from date of delivery.

LonWorks, LonMark and the LonMaker are trademarks of Echelon Corporation registered in the United States and other countries. All other trademarks are acknowledged.



Safeguard Systems
THE DAMPER SPECIALIST COMPANY

Systems House, Unit 34, Southern Cross Business Park, Bray, Co. Wicklow
T: +353 1 2761600 F: +353 1 2761611 E: info@safeguard.ie www.safeguard.ie